

Datasheet

TrustSight Gen 3 LED Emergency Lighting Kit

TrustSight Emergency drivers

The application of LED technology within the lighting sector also requires integration of reliable emergency lighting equipment inside luminaires. The range of TrustSight emergency lighting solutions offers easy design-in and is compatible with all dimmable and non-dimmable linear high voltage and SELV LED drivers. The TrustSight emergency driver is designed for maintained solutions but can also be used in a non-maintained emergency lighting configuration. It offers self-testing (IEC 62034) and is available with 3 hours emergency duration. Two battery technologies are supported by the TrustSight: NiMH batteries and lithium-ion batteries. The TrustSight LED emergency drivers come with battery harness and LED indicator. The TrustSight driver can also be used as an independent emergency driver with the separately available strain relief accessories.

Benefits

- Compliant with prevalent international standards.
- Easy system integration with LED driver and LED modules
- Built-in and Independent use
- Supports Insulation Class I and II applications

Features

- Constant output power
- Compatible with NiMH and Lilon batteries
- Automatic cell count detection
- Double-insulated/SELV or HV output

Applications

• Offices, supermarkets, department stores, schools, etc.

Logistical data

| 12NC | Pieces per box |
|----------------|--|
| 9290 016 42606 | 10 |
| 9290 016 42706 | 10 |
| 9290 016 42806 | 10 |
| 9290 016 39906 | 10 |
| 9290 016 40006 | 10 |
| 9290 016 40106 | 10 |
| 9290 016 51906 | 10 |
| 9290 016 52006 | 10 |
| 9290 016 52106 | 10 |
| 9290 016 52206 | 10 |
| 9290 016 52306 | 10 |
| 9290 016 52406 | 10 |
| 9290 021 45806 | 10 |
| 9290 021 45906 | 10 |
| 9290 028 13806 | 10 |
| 9290 028 13906 | 10 |
| | 9290 016 42606 9290 016 42706 9290 016 42806 9290 016 39906 9290 016 40006 9290 016 51906 9290 016 52006 9290 016 52106 9290 016 52206 9290 016 52306 9290 016 52406 9290 021 45806 9290 021 45906 9290 028 13806 |

 $The Trust Sight PRO \ and \ DALI types \ are equipped with self-test functionality according \ IEC 62034. The Trust Sight Basic can only be tested manually (via mains interruption or with a test switch). \ LED-indicator \ and \ battery \ connection \ cable \ are included in the driver box.$

| Product name | 12NC | Pieces per box |
|---|----------------|----------------|
| TrustSight 3.6V 3cell 4000mAh battery NiMH | 9290 016 52506 | 10 |
| TrustSight 4.8V 4cell 4000mAh battery NiMH | 9290 016 52606 | 10 |
| TrustSight 6.0V 5cell 4000mAh battery NiMH | 9290 016 52706 | 10 |
| TrustSight 3.2V 3cell 4500mAh battery LFP | 9290 016 53006 | 10 |
| TrustSight 6.4V 4cell 3000mAh battery LFP | 9290 016 53106 | 10 |
| TrustSight 9.6V 6cell 3000mAh battery LFP | 9290 016 53206 | 10 |
| TrustSight 6.4V 4cell 3000mAh battery LFP FRC | 9290 021 40906 | 10 |

The selected TrustSight battery pack will determine the output power in emergency mode.

| Product name | 12NC | Pieces per box |
|------------------------------------|----------------|----------------|
| TrustSight Strain relief | 9290 016 53306 | 20 |
| TrustSight battery independent box | 9290 016 53406 | 10 |
| TrustSight Indicator LED | 9290 016 53606 | 20 |
| TrustSight battery harness NiMH | 9290 016 82206 | 20 |
| TrustSight battery harness LFP | 9290 016 82006 | 20 |
| TrustSight battery LFP FRC | 9290 021 41006 | 20 |
| TrustSight HB LED indicator | 9290 021 70606 | 1000 |

EM system contains:

TrustSight driver for built-in application

TrustSight driver for independent application





Wiring & Connections

Electrical input data

| Specification item | value | Unit | Condition |
|---|--------|------|---|
| Rated input voltage range | 220240 | Vac | |
| Rated input frequency range | 5060 | Hz | |
| Rated input current | 35 | mA | @230 Vac, 2S3P LFP pack |
| Rated input voltage | 230 | Vac | |
| Rated input power | 6 | W | @230 Vac, 2S3P LFP pack |
| Rated input power with battery charger idle | < 1 | W | |
| Power Factor | 0.7 | | Battery charge state |
| Input voltage AC | 202254 | Vac | Performance range |
| Input voltage AC | 198264 | Vac | Safety operational range |
| Input frequency AC | 4763 | Hz | Performance range |
| Input frequency AC | 4566 | Hz | Safety operational range |
| Switched mains contact current | 2.4 | А | Maximum permissible current (Basic only) |

Electrical output data

| Specification item | value | Unit | Condition |
|-------------------------------------|----------------|--------------|------------------------------------|
| Regulation method | Constant Power | | Full output voltage range |
| Output voltage SELV | 1555 | Vdc | |
| Output voltage max. SELV | 60 | 60 Vpk U-OUT | |
| Output voltage HV | 45300 | Vdc | |
| Output voltage max. | 330 | Vpk | U-OUT |
| Output power | 25 | W | Depending on selected battery pack |
| | | | |
| I _{LED} max | 1 | A | Maximum LED current from AC driver |
| Switch over time ac. Emergency Mode | < 500 | ms | |

Battery pack vs. output power

| Specification item | 12NC | Туре | Capacity [mAh] | Max. outpower in EM mode [W] | Standard discharge current [mA] | Maximum continuous discharge current [mA] | Discharge to pack voltage level [V] |
|---|----------------|--------------|-------------------|------------------------------|---------------------------------|---|-------------------------------------|
| TrustSight 3.6V 3cell 4000mAh battery NiMH | 9290 016 52506 | NiMH3cell | 4000 | 3 (2.7) | 800 | 1300 | 3.0 |
| TrustSight 4.8V 4cell 4000mAh battery NiMH | 9290 016 52606 | NiMH4cell | 4000 | 4 (3.7) | 800 | 1300 | 4.0 |
| TrustSight 6.0V5cell4000mAhbattery NiMH | 9290 016 52706 | NiMH5cell | 4000 | 5 (4.7) | 800 | 1300 | 5.0 |
| TrustSight 3.2V3cell4500mAhbattery LFP | 9290 016 53006 | LFP 1S3P | 4500 | 2 (2.1) | 900 | 1350 | 2.5 |
| TrustSight 6.4V4cell3000mAhbattery LFP | 9290 016 53106 | LFP 2S2P | 3000 | 3 (2.9) | 600 | 900 | 5.0 |
| TrustSight 9.6V 6cell 3000mAh battery LFP | 9290 016 53206 | LFP 3S2P | 3000 | 5 (4.7) | 600 | 900 | 7.5 |
| TrustSight 6.4V 4cell 3000mAh battery LFP FRC | 9290 021 40906 | LFP FRC 2S2P | 3000 | 3 (2.9) | 600 | 900 | 5.0 |

 $^{^{\}star}$ Batteries are sufficiently charged within 24 hours after being discharged.

DALI

The TrustSight drivers with DALI functionality comply with DALI standard IEC IEC62386 and IEC62386-202 (particular requirement for control gear - Self-contained emergency lighting). Commands supported are given below:

Inhibit

Query lamp failure

Rest

Re_light_reset_inhibit Start function test Start duration test

Stop test

Reset function test done flag Reset duration test done flag

Reset lamp time

Store test execution timeout

Store prolong time

Start identification

Query battery charge

Query test timing

Query duration testresult

Query lamp emergencytime

Query lamp total operation time

Query emergency level

Query rated duration

Query emergency mode

Query features

Query Failure status

Query Emergency status

The TrustSight drivers with DALI functionality support SimpleSet configuration. Several setting can be selected to configure the TrustSight driver.

| Parameter | Default setting | Range | description |
|-------------------------------|-----------------|-------------------|---|
| Output power | 100 | 50 – 100% | Output power can be tuned as % of selected power |
| Region Selection | Europe | Europe | |
| | | Australia | |
| Duration test acceptance time | 180 | 1 – 240 minutes | Australia: 90 minutes |
| SelfTest Mode | fixed | Fixed/DALI | Fixed mode gives standard FT/DT interval times |
| Function Test (FT) interval | 28 days | | Fixed mode |
| Duration Test (DT) interval | 24 weeks | | Fixed mode |
| Function Test (FT) interval | 7 days | | DALI mode, Configurable via DALI |
| Duration Test (DT) interval | 52 weeks | | DALI mode, Configurable via DALI |
| Battery Type | NiMH, LFP | Product dependent | Depends on the selected TrustSight type |
| Battery capacity | Auto Detect, | Auto Detect | The TrustSight detects the cell count automatically |
| | | NiMH 3cell for 3W | |
| | | NiMH 4cell for 4W | |
| | | NiMH 5cell for 5W | |
| | | LFP (1S3P) for 2W | |
| | | LFP (2S2P)for 3W | |
| | | LFP (3S2P) for 5W | |

In the Diagnostics tab of MultiOne the following parameters can be read out:

| Parameter | Unit | |
|----------------------------------|---------|---------------------------------------|
| Lamp emergency time | Hours | |
| Lamp total operation time | Hours | |
| Last duration test time | Minutes | |
| Time since last duration test | Days | |
| Total number of discharge cycles | - | Number of complete battery discharges |
| | | |

Reset battery detection:

It is possible to set back the battery capacity (cell count) to autodetect, e.g. when the system is incorrectly configurated. To reset the battery cell count there are two options:

- Direct change of the battery cell-count in the memory bank via DALI, e.g. in the final tester.
- Power cycle scheme to reset the driver to factory defaults:
 - 1. Apply mains voltage to mains input and 12Vdc to battery input simultaneously (or within 2s)
 - 2. After 1s the indicator LED starts fast flashing RED for 2s (4 times)
 - 3. Remove 12Vdc while flashing.
 - 4. After 1s the Indicator LED becomes steady GREEN for 2s.
 - 5. Disconnect mains voltage.

To change to Australia mode:

- 1. Apply mains voltage to mains input and 12Vdc to battery input simultaneously (or within 2s)
- 2. After 1s the Indicator LED starts fast flashing RED for 2s (4 times)
- 3. Remove 12Vdc while flashing, then press the test button. Indicator LED will extinguish.
- 4. After 4s disconnect mains voltage.

Note: pressing the test button during the procedure will reset the device with Australia mode enabled, while not pressing the button will reset the device with Australia mode disabled.

If 12Vdc is applied for more than 3s or for less than 1.5s then a factory reset will not take place. Applying an invalid battery voltage will trigger a battery failure state (RED indicator LED), which when mains power is lost, will render the emergency function inactive (no emergency lighting).

To verify the successful execution: connect a valid battery and connect the driver to mains voltage for no more than 7 seconds to be sure the product stays in autodetect mode. Battery detection will take place within 7s. During this period, the indication will flash green.

To verify that Australia mode is active, press the test button for at least 10s while the battery is charging. The 30s functional test is started. When test succeeds, the LED indicator is flashing fast green (for 5 days). This is specific for Australia mode.

Wiring & Connections

| Specification item | value | Unit | Condition |
|---|-------------|-----------------|--|
| Built-in use: mains input wire cross-section | 0.51.5 | mm ² | WAGO250, solid and stranded wire |
| | 2016 | AWG | WAGO250, solid and stranded wire |
| Independent use: mains input wire cross-section | 0.751.5 | mm ² | WAGO250, solid and stranded wire |
| | 1816 | AWG | WAGO250, solid and stranded wire |
| Input wire strip length | 8.59.5 | mm | |
| Independent use: input/output thick/thin cable diameter | 68 / 1.42.0 | mm | |
| Output wire cross-section | 0.51.5 | mm ² | WAGO250, solid and stranded wire |
| Output wife cross-section | 2016 | AWG | WAGO250, solid and stranded wire |
| Input wire strip length | 8.59.5 | mm | |
| Maximum cable length | 0.6 | m | Total length of wiring including LED module, one way |




Insulation TrustSight Pro & DALI driver

| | Mains | Battery | LED in/output | Status LED | DALI |
|---------------|----------------------|---------------|---------------|---------------|------|
| Mains | NA | | | | |
| Battery | Double | NA | | | |
| LED in/output | HV: Double, LV: SELV | Functional | NA | | |
| Status LED | Double | No | Functional | NA | |
| DALI | Basic | Supplementary | Supplementary | Supplementary | NA |


Insulation TrustSight Basic driver

| | Mains | Battery | LED in/output | Status LED | SW line |
|---------------|----------------------|---------------|---------------|---------------|---------|
| Mains | NA | | | | |
| Battery | Double | NA | | | |
| LED in/output | HV: Double, LV: SELV | Functional | NA | | |
| Status LED | Double | No | Functional | NA | |
| SW line | Basic | Supplementary | Supplementary | Supplementary | NA |

Connection example with TrustSight HV with HV LED modules

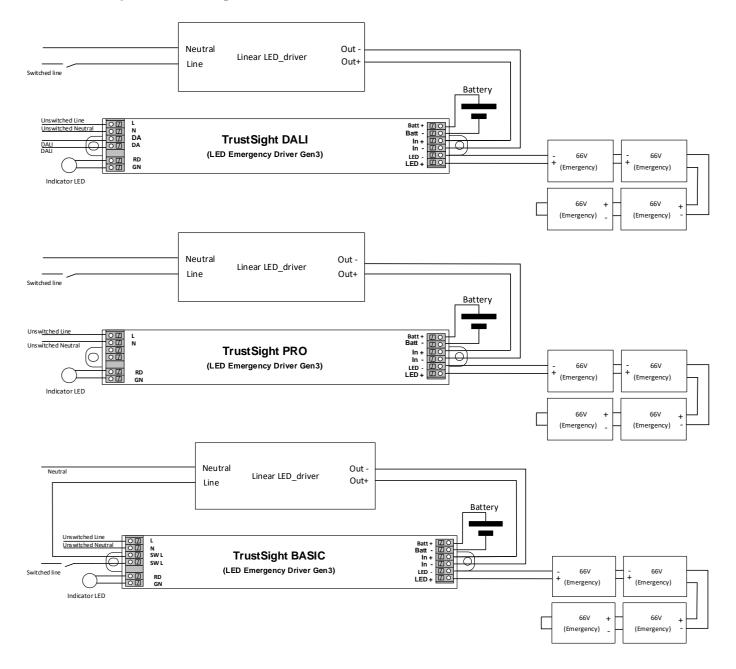


Connection example with TrustSight SELV with LV LED modules

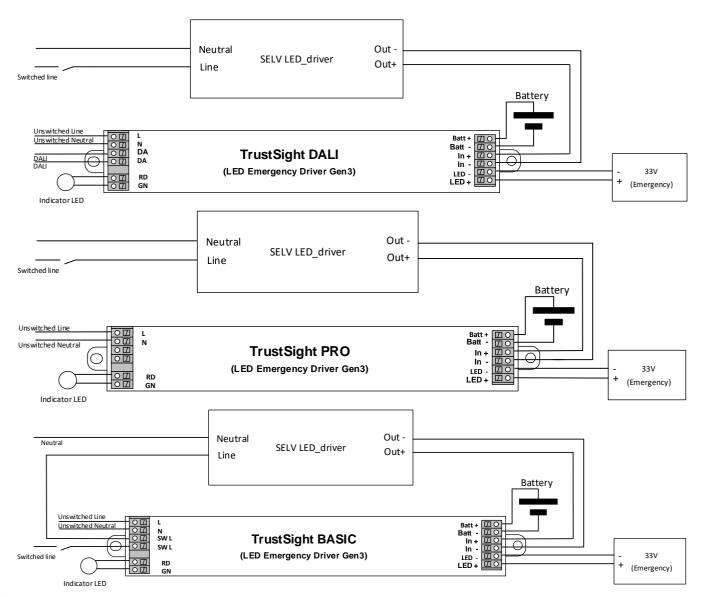


Warning: The TrustSight LV SELV driver does not support operation combined with non-SELV AC drivers.

Dimensions and weight


| Specification item built-in version | value | Unit | Condition |
|-------------------------------------|-------|------|-----------|
| Length | 205 | mm | |
| Width | 30 | mm | |
| Height | 21 | mm | |
| Fixing hole diameter | 4.1 | mm | |
| Fixing hole distance | 195.5 | mm | |
| Weight | 85 | gram | |

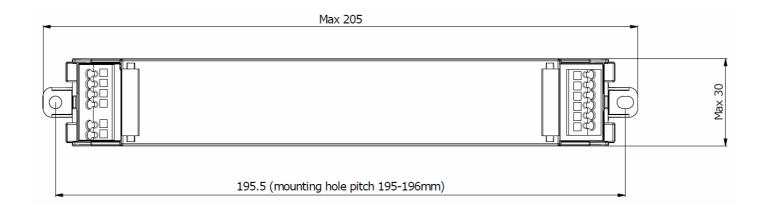

| Specification item independent version | value | Unit | Condition |
|--|-------|------|-----------|
| Length | 238 | mm | |
| Width | 30 | mm | |
| Height | 21 | mm | |
| Fixing hole diameter | 4.1 | mm | |
| Fixing hole distance | 195.5 | mm | |
| Weight | 100 | gram | |

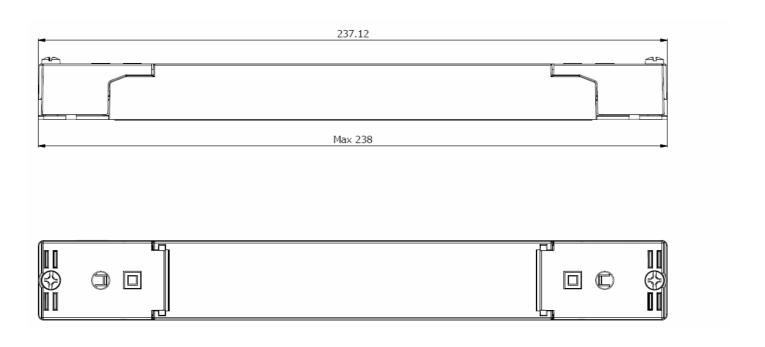

NiMH battery

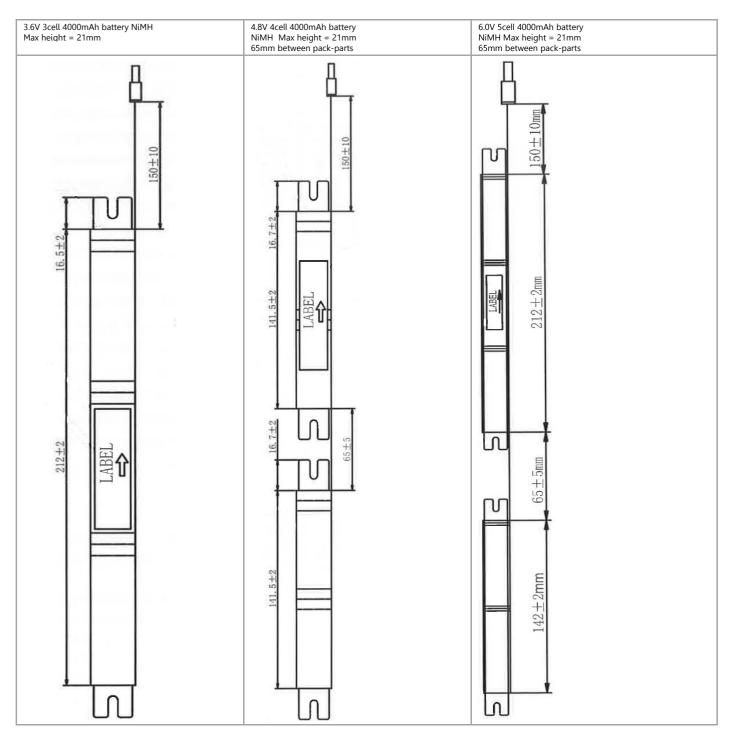

Parts List


| Item | Quantity | Description |
|-----------------------------|----------|----------------|
| Mounting PCB | 1, 2, 2 | |
| Cell | 3, 4, 5 | HRH18700-4000T |
| Battery/PCB insulation wrap | | PVC |
| Connector | 1 | Molex 5557-2P |
| Wire | 2 | UL1007, 20AWG |



Warning:

The battery wires currently do not support independent operation with respect to compliance per IEC60598-2 clause 22.16 unless a fire and heat resistant sleeve is put around the wires (not included).

LFP battery

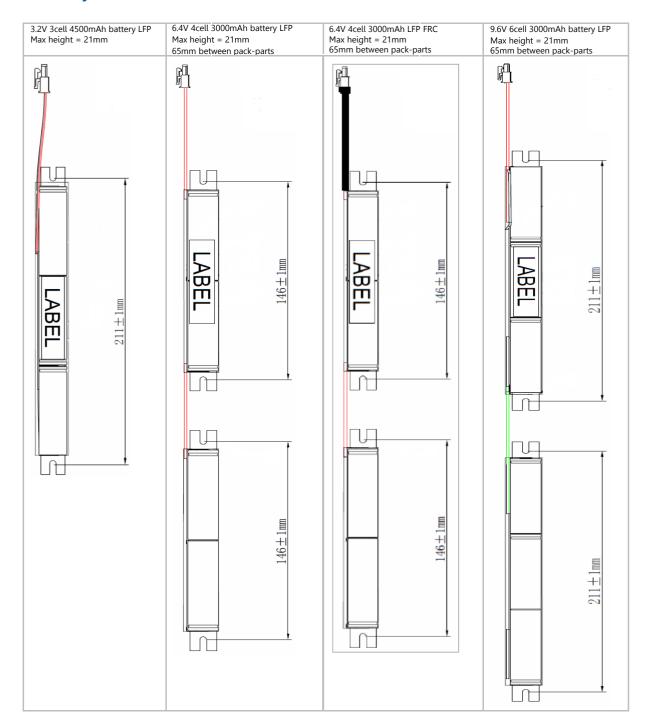

Parts List

| Item | Quantity | Description |
|-----------------------------|----------|-------------------------------------|
| Mounting PCB | 1, 2, 2 | 223X16 |
| Cell | 3, 4, 6 | FR18650E1500 |
| Battery/PCB insulation wrap | | PVC, white |
| Connector | 1 | Molex 5557-03R2 |
| Connector (FRC type only) | 1 | Molex 50-29-1662, glow wire capable |
| Wire | 2 | UL1007, 20AWG |
| Cable (FRC type only) | 1 | UL2464, 2F x 18AWG |




Warning:

The battery wires currently do not support independent operation with respect to compliance per IEC60598-2 clause 22.16 unless a fire and heat resistant sleeve is put around the wires (not included). A special LFP FRC battery pack (9290 021 40906) and FRC battery harness (9290 021 41006) is available for that purpose.

Battery box (for SELV driver only)





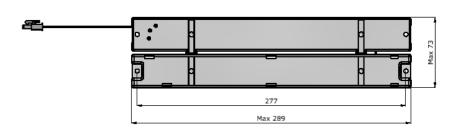

| Specification item | value | Unit | Condition |
|---------------------------------------|--------|------|-------------------------------|
| Ambient temperature driver | -20+55 | °C | |
| Ambient temperature NiMH battery pack | 0+50 | °C | |
| Ambient temperature LFP battery pack | 0+55 | °C | |
| Tcase-max driver | 75 | °C | lifetime 70 khrs |
| Tcase-max NiMH battery pack | 55 | °C | during charging |
| Tcase-max NiMH battery pack | 50 | °C | Lifetime 4 years in operation |
| Tcase-max LFP battery pack | 55 | °C | during charging |
| Tcase-max LFP battery pack | 55 | °C | Lifetime 6 year in operation |
| Maximum housing temperature driver | 110 | °C | In case of failure |
| Relative humidity driver | 1090 | % | Non-condensing |

Storage temperature and humidity

| Specification item | value | Unit | Condition |
|---|--------|------|----------------|
| Storage Ambient temperature driver | -25+70 | °C | |
| Storage Ambient temperature NiMH battery pack | -20+30 | °C | For 6 months |
| Storage Ambient temperature LFP battery pack | -20+25 | °C | For 12 months |
| Relative humidity driver | 595 | % | Non-condensing |

Lifetime


| Specification item | value | Unit | Condition |
|-----------------------|--------|-------|---|
| Driver lifetime | 70,000 | hours | Measured temperature at Tc-point is Tcase- max. Maximum failures = 10% |
| NiMH battery | 4 | year | |
| NiMH battery warranty | 1 | year | As long as the cell is treated in accordance with the specification and/or handling precautions and prohibitions. |
| LFP battery | 6 | year | |
| LFP battery warranty | 3 | Year | As long as the cell is treated in accordance with the specification and/or handling precautions and prohibitions. |

TrustSight features / protections

| Specification item | value | Remark | Condition |
|--|----------|--------|----------------------|
| Open load protection – LED | Yes | | |
| Short circuit protection - LED | Yes | | |
| Hot wiring - LED | No | | |
| Suitable for luminaire Insulation Class | I and II | | Acc. IEC60598-1 |
| Open load protection – battery connection | Yes | | Automatic recovering |
| Short circuit protection – battery connection | Yes | | Automatic recovering |
| Reverse polarity protection – battery connection | Yes | | Automatic recovering |

Inrush current and fusing

| Specification item | value | Unit | Condition |
|-----------------------------------|-------|------|---|
| Inrush current I _{peak} | 5 | Α | Input voltage 230 V |
| Inrush current T _{width} | 110 | μs | Input voltage 230V, measured at 50% I _{peak} |
| Drivers / MCB 16A type B | 200 | | Indicative value |

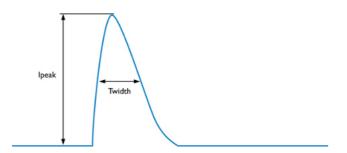

Touch current

| Specification item | value | Unit | Condition |
|-------------------------------------|-------|------|--|
| Typical touch current (parasitical) | < 0.7 | mApk | To all accessible parts, LED module contribution not |
| | | | included |

Surge immunity

| Specification item | value | Unit | Condition |
|-----------------------------------|-------|------|---|
| Mains surge immunity (diff. mode) | 1 | kV | L-N, acc. IEC61000-4-5, 2 Ohm 1.2/50µs |
| Mains surge immunity (comm. mode) | 2 | kV | L/N - other, acc. IEC61000-4-5, 12 Ohm 1.2/50µs |

Certificates and standards

| Compliance and approval | Generated disturbances (EMI/EMC) |
|------------------------------|--|
| EN 55015 A2/CISPR15 | Conducted EMI 9 kHz-30 MHz |
| EN 55015 A2/CISPR15 | Radiated EMI 30 MHz-300 MHz |
| IEC 61000-3-2 A1 + A2 | Limits for mains input current harmonics |
| IEC 61000-3-3 | EMC – Limitation of voltage fluctuation and flicker in low-voltage supply systems for equipment rated up to 16 A |
| Immunity | |
| IEC / EN 61547, A12000 | Equipment for general lighting purposes – EMC immunity requirements |
| IEC / EN 61000-4-2 | Electrostatic Discharge |
| IEC / EN 61000-4-3 A1 | Radiated radio frequency, electromagnetic field immunity |
| IEC / EN 61000-4-4 | Electrical fast transient/burst immunity |
| IEC / EN 61000-4-5 | Surge immunity |
| IEC / EN 61000-4-6 | Conducted disturbances induced by RF fields |
| IEC / EN 61000-4-11 | Voltage dips, short interrupts, voltage variations |
| Performance | |
| IEC 62384 | DC or AC supplied electronic control gear for LED modules - Performance requirements |
| IEC 62386 | Digital Addressable Lighting Interface (DALI) |
| Safety standards | |
| IEC / EN / AS/NZS 61347-1 | General and safety requirements |
| IEC / EN / AS/NZS 61347-2-13 | LED Particular requirements for DC or AC supplied electronic control gears for LED modules |
| Emergency standards | |
| IEC / EN 61347-2-7 | Particular requirements for DC supplied electronic ballasts for emergency lighting |
| IEC / EN 62034 | Automatic test systems for battery powered emergency escape lighting |

RCM independent control gear classification

| Regulation AS/NZS 60598.2.2 | Applies when the control gear is built inside constructions | | |
|--|---|----------|--|
| Clearance type | Description | Distance | |
| Height clearance to building element (HCB) | Minimum distance between the top of the control gear and any building element above it | 5mm | |
| Minimum insulation clearance (MIC) | Minimum distance between the top of the control gear and the building insulation above it | 5mm | |
| Side clearance to building element (SCB) | Minimum distance between the side of the control gear and any building element | 5mm | |
| Side clearance to insulation (SCI) | Minimum distance between the side of the control gear and any building insulation | 5mm | |

RISK OF FIRE BUILDING INSULATION MUST NOT COVER THE CONTROL GEAR

Please refer to the driver certificates for more details at www.philips.com/oem.



©2020 Signify Holding, IBRS 10461, 5600 VB, NL. All rights reserved.

The information provided herein is subject to change without notice. Signify does not give any representation or warranty as to the accuracy orcompleteness of the information included herein and shall not be liable for any action in reliance thereon. The information presented in this documentis not intended as any commercial offer and does not form part of any quotation or contract, unless otherwise agreed by Signify. Philips and the Philips Shield Emblem are registered trademarks of Koninklijke Philips N.V. All other trademarks are owned by Signify Holding or their respective owners.

Date of release: March 13, 2020 v3